

RSP 7-06


DIRECTIONAL CONTROL VALVES

| KE 2053 | 07/13 |

D_n 06 | p_{max} 32 MPa | Q_{max} 80 dm³/min

Manually operated directional control valves of type RSP7-06 operated by hand lever are used to control start, stop and direction of fluid in hydraulic systems.


Dn 06, NG 06 | Avaliable with detent assembly | Manually operated | Proven design | Installation dimensions according to: CETOP RP 121-H, ISO 4401, DIN 24340

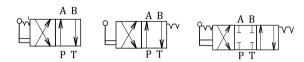




FUNCTIONAL DESCRIPTION

Hand operated directional control valves of type RSP7-06 are used to control start, stop and direction of fluid in hydraulic systems. They are being manufactured as two-or three-position valves (see Spool Symbols and Crossovers) and consist of valve housing **1** with control spool. The actuating section of the valve consists of the hand lever **4** and one (for 4/2 way) or two (for 4/3 way) springs **3** returning the control spool **2** to the default position. The surface treatment of the valve housing and actuating section is either phosphate coated or spray painted. The hand lever is always made from stainsless steel.

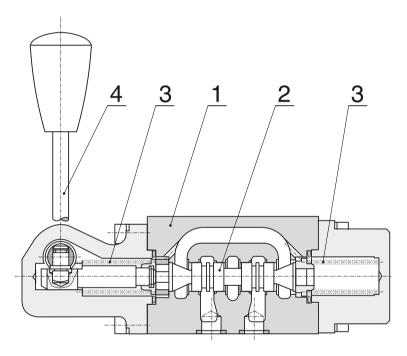

ORDERING CODE

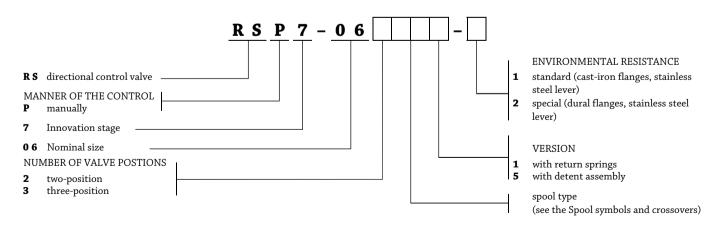



INSTALLATION, SERVICE AND MAINTENANCE

Directional control valves RSP7-06 are designed for panel installation. They are being mounted by four screws M5x45 with torque 14Nm and can be installed in any working position. The reliability of the valves is conditional upon use of prescribed working fluid, especially its parameters such as cleanness and temperature.

DELIVERY


Directional control valves of type RSP7-06 operated by hand lever are delivered assembled. Spare parts and mounting screws are not included in the package. These must be ordered separetly.

TECHNICAL DATA

Technical data	Symbol	Unit	Value
Valve size	D _n	mm	6
Maximal flow	Q _{max}	dm ³ /min	curve Q _{max} = f(p)
Maximal operating pressure in ports P, A, B	P _{max,a}	MPa	32
Maximal operating pressure in port T	p _{max,t}	MPa	10
Pressure drop	Δp	MPa	see pressure drop curves
Viscosity range	V	m ² /s	$10 \cdot 10^{-6}$ up to $400 \cdot 10^{-6}$
Maximum degree of fluid contamination	class 9 ac	ccording to NAS 1638, 18/1	L5 according to ISO 4406
Fluid temperature range	t _{po}	°C	−20 up to +70
Ambient temperature range	t _k	°C	−20 up to +60
Type of climatic resistance IEC-721-2-1			WT
Hydraulic medium		Hydraulic oils of power	er class (HL,HLP) according to DIN 51524
Weight RSP7-06 xxxx -1 / RSP7-06 xxxx -2	m	kg	1.6/1.35
Mounting position		unrestricted	
Service life		10 ⁶ cycles	
Installation dimensions	according to: I	OIN 24 340 / ISO 4401 / CE	ETOP RP121-H

PRESSURE DROP

Measured at $t = 50^{\circ}C$ and $V = 35 \text{mm}^2/\text{s}$

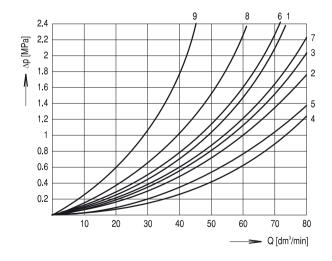


Spool	Resp	ective pr	essure di	rop curve	No.:
type	P–A	P-B	А-Т	В-Т	P-T
Z1	1	1	2	2	-
H1	3	3	4	4	-
Y1	1	1	4	4	-
Y2	1	1	5	5	-
L2	3	1	4	2	-
P1	3	3	2	2	-
B1	1	1	2	4	-
R1	6	6	2	2	-
J1	6	6	2	2	-
R2	7	1	5	4	-
A5	1	1	-	-	-
J7	1	1	-	-	-
C1	3	3	2	2	9
C2	8	8	6	6	9
Z2	3	3	-	2	-
P5	-	3	2	-	-
Y5	-	1	4	-	-



OPERATING LIMITS

Measured at t = 50°C and V = 35mm²/s

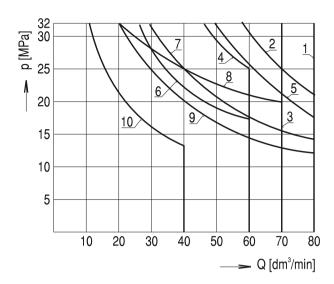



Curve	Spool type
1	Z1, B1, Y2, J1, J2, J7
2	Y1, Y5
3	R2
4	R1
5	A5
6	Z2
7	P1, P5
8	H1
9	C1, C2
10	L2


VALVE DIMENSIONS

Environmental resistance: standard (RSP7-06 xxxx - 1) width: 45mm

Environmental resistance: special (RSP7-06 xxxx - 2) width: 45mm

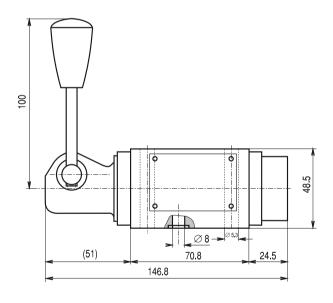

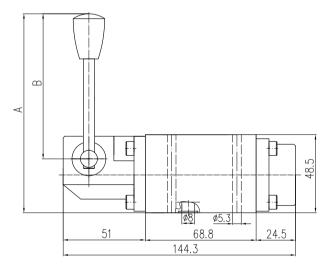

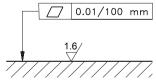


Required surface finish of subplate.

Note: RSP7-06 with special environmental resistance can be ordered with longer hand lever (upon request). Default length B = 100mm

A	125	150	175
R	100	125	150



INSTALLATION DIMENSIONS

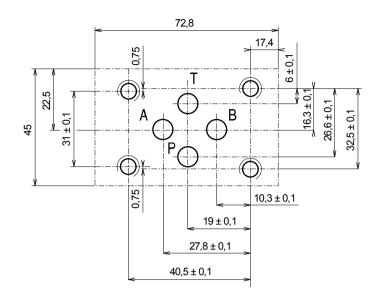

SPOOL TYPES AND CROSSOVERS TWO POSITION

Version: with return springs

Тур	oe e	Symbol	Crossover
RSP 7-062	AR11	a W	a L L L
RSP 7-062	AR21	a WW	a A
RSP 7-062	AA51	a T T TW	a T T T
RSP 7-062	AP51	a W	a T T T
RSP 7-062	AY51	a VIIIW	a T T
RSP 7-062	AZ11	a W T T T W	a 1 1 1 1 1 1
RSP 7-062	AY11	a W T W	a T T
RSP 7-062	AY21	a W X W	a TTT
RSP 7-062	AH11	a W W	a
RSP 7-062	AC11	a WA J	a A L
RSP 7-062	AC21	a WA III W	a A IIII
RSP 7-062	AZ21	a W T T T W	a TITT
RSP 7-062	AB11	a W T L W	a T T T
RSP 7-062	AP11	a W W	a
RSP 7-062	AL21	a W W	a
RSP 7-062	BZ11	WI TIN b	
RSP 7-062	BY11	M b	T D D
RSP 7-062	BY21	W W b	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
RSP 7-062	BH11	₩ b	b b



Туј	pe	Symbol	Crossover
RSP 7-062	BC11	a WI I W	
RSP 7-062	BC21	a WI I W	p p
RSP 7-062	BZ21	a WI IIIW	t 11 1 b
RSP 7-062	BB11	W D D D	T V V b
RSP 7-062	BP11	M b	ф <u>т</u> т ф b
RSP 7-062	BL21	M b	b b
RSP 7-062	BX11	₽ XII W ^b	T T b
RSP 7-062	BX21	₽ XII W ^b	b b
RSP 7-062	BV11	PTT TW	b b
RSP 7-062	BX31	<u>A</u>	Ď b

Version with detent assembly

Тур	oe	Symbol	Crossover
RSP 7-062	AJ15	**************************************	a L L b b
RSP 7-062	AJ25	3	a b
RSP 7-062	AJ75	a T T	a T T T b
RSP 7-062	AZ15	a TIT	a I II b
RSP 7-062	AY15	a Ti	a t t t b
RSP 7-062	AY25	a	a T T b
RSP 7-062	AH15	2	a b
RSP 7-062	AC15		a A V D D D
RSP 7-062	AC25		a A
RSP 7-062	AZ25	a	a b b
RSP 7-062	AB15	a	a b b
RSP 7-062	AP15	a Thirt	a to the second of the second
RSP 7-062	AL25	a	a b
RSP 7-062	BJ15	₽ \ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	a L L A b
RSP 7-062	BJ25	₽\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	a b
RSP 7-062	BJ75	2 7 7 7 6	a T T T b
RSP 7-062	BJ85	₽¶\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	a b
RSP 7-062	BZ15		a
RSP 7-062	BY15	PT b	a T T V b
RSP 7-062	BY25	₽T b	a



Туре		Symbol	Crossover
RSP 7-062	BH15	₽ b	a b b
RSP 7-062	BC15	₽ŢŢŢŢ, p	a L L b
RSP 7-062	BC25	₽ TIV b	a I I I I b
RSP 7-062	BZ25	₽ŢŢŢŢŸ b	a
RSP 7-062	BB15	₽ŢŢŢŢŢ b	a
RSP 7-062	BP15	₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽₽	a T T b
RSP 7-062	BL25	2 - 1 b	a T D b

SPOOL TYPES AND CROSSOVERS - THREE POSITION

Version: with detent assembly

Туре		Symbol	Crossover
RSP 7-063	Z15	a T T b	a
RSP 7-063	Y15	a b	a T T T D b
RSP 7-063	Y25	a The b	a T T T V b
RSP 7-063	H15	a b	a b
RSP 7-063	C15	a b	a b
RSP 7-063	C25	a b	a h i i i i i i i b
RSP 7-063	Z25	a T T b	a
RSP 7-063	B15	a b b	a T T V V V b
RSP 7-063	P15	a b	a T T T D
RSP 7-063	L25	a b	a T T D b

Version: with return springs

Туре		Symbol	Crossover
RSP 7-063	Z11	a W D	a
RSP 7-063	Y11	a W b	a T T T D b
RSP 7-063	Y21	a W T T W b	a TTTT T b
RSP 7-063	H11	a W b	a b
RSP 7-063	C11	a W b	a b
RSP 7-063	C21	a W b	a littii b
RSP 7-063	Z21	a W D	a
RSP 7-063	B11	a W b	a T T VT V b
RSP 7-063	P11	a W b	a T T T D
RSP 7-063	L21	a _W b	a T T D b



SPARE PARTS

Seal kit

Tymo	Dimensions ar	nd quantity
Туре	O-ring	O-ring
Standard NBR 70	15.6x1.78 mm (2pcs)	9.25x1.68 mm (4pcs)

Bolt kit

Dimensions and quantity	Torque
M5x45 DIN 912-10.9 (4pcs)	14 [Nm]

NOTES

The data is subject to change. The manufacturer reserves the right to make changes and/or improvements without prior notice. It is understood that the information in this datasheet is being used at one's own risk

Consultancy service is provided by: **PQS Technology, Ltd.**

Sales department: tel.: +420 313 526 236 e-ma Technical support: tel.: +420 313 526 378 e-ma

Fax: +420 313 513 091 www.pqstechnology.co.uk

e-mail: export@pqstechnology.co.uk e-mail: info@pqstechnology.co.uk